


1. Battery Cover
2. Battery Cover Screw
3. Memory Card Slot
4. SIM Card Slots (Under Battery)
5. Charging Pins
6. Flashlight
7. Second Microphone
8. Camera (Not available in all models)
9. Air Pressure Sensor
10. Secondary Display
11. PTT Button
12. Volume Up/ Down
13. 3.5mm Headset Connector
14. USB-C Charging Port
15. Notification Bar
16. Primary Display
17. Main Menu/App Tray
18. Options
19. Clear
20. Select
21. Answer/Accept
22. Voicemail (Press and Hold)
23. Lock Keypad (Press and Hold)
24. Primary Microphone
25. Loud Speaker
26. Earpiece
27. Back Key
28. Speakerphone
29. End/ Reject/ Power On & Off (Press and Hold)
30. Navigation
31. Text Input Mode



INBOX COMPONENTS	
Sonim XP3	USB-C Cable
SIM Card	Screw driver
Battery	Quick Start Guide
Wall Charger	

**SONIM XP3  
QUICK START GUIDE**

**HOW TO INSERT A NEW SIM CARD**

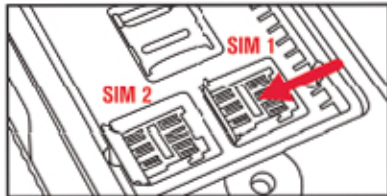

- Step 1**  
Use the included screwdriver to unfasten the battery door screw on the back of the phone.
- Step 2**  
Remove battery door and battery.
- Step 3**  
Slide the SIM door to the left and open the SIM1 SIM card tray, insert the SIM card. Close the SIM door by sliding the door to the right until you hear a click to lock it in place.

**HOW TO INSERT THE BATTERY**

- Step 1**  
Insert the battery and flush into the cavity such that the four metallic contacts at the top of the battery are aligned with the metallic contacts within the battery compartment.

- Step 2**  
Close the battery cover by turning the screws in a clockwise direction using the screwdriver provided. Please ensure you do not over-tighten the screws.

**INITIAL PHONE SET-UP**

Insert the SIM card into your device. Then, insert the battery and screw the battery cover closed. Press and hold Power On / Off key to turn power On. After the phone successfully registers with the network, the name of the service provider is displayed in the Navigation Bar. When powering the phone On for the first time, a Welcome Screen is displayed. To set up the phone, select Start and follow the instructions shown on the screen. After the initial set-up is complete, the Home Screen is displayed.


**MAKE A CALL**

From Home Screen, select the Phone app. Use the keypad or select a Contact. Select the Phone button to enable call.

**SET-UP WI-FI**

From Home Screen, open App tray:  
Settings > Wi-Fi > On > choose network > enter password > Connect

**USING YOUR SONIM  
SECURE AUDIO 3.5MM CONNECTOR**

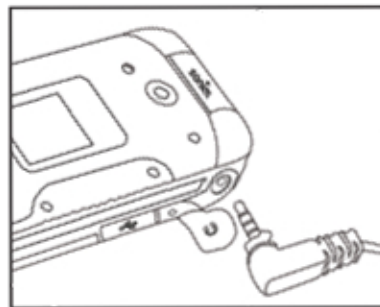

Provides a secure-connection and power for ultra-reliable, ultra-loud and ultra-clear mission critical audio products.

Visit [www.sonimtech.com](http://www.sonimtech.com) for a broad portfolio of Sonim certified accessories, including remote speaker microphones, headsets, holsters, multi-bay chargers, vehicle kits, and more.

Accessories sold separately.

**SONIM SCOUT**

Take full advantage of your Sonim XP3 by utilizing the SCOUT assistant on your phone and registering your company on Sonim Cloud [www.sonimcloud.com](http://www.sonimcloud.com).



**BATTERY**

The battery in your phone is not fully charged. We recommend charging the phone for 2.5 hours before use.

**3 YEARS WARRANTY**

Sonim Technologies provides a 3-Year comprehensive warranty on the phone, and a 1-Year warranty on the battery. Please register within 30 days of purchase at [www.sonimtech.com/register](http://www.sonimtech.com/register) to receive product information and updates. For more information related to the warranty, please contact your service provider.

**SUPPORT**

Email: [support@sonimtech.com](mailto:support@sonimtech.com)  
Phone: 1-833-697-6646  
Monday - Friday (24 hours a day)

Download a User Guide: from [sonimtech.com](http://sonimtech.com) or call 1-833-MY-SONIM (1-833-697-6646)