

Quick Start Guide



RUGGED RELIABILITY

About your phone



NOTE: Devices and software are constantly evolving. The screen images and icons you see here are for reference only.

What is in the box?

- Phone
(includes non-removable Li-Ion battery)
- Certified Quick Charge 2.0 AC Adapter
- Type-A to Type-C USB cable
- Pre-installed SIM card
- Quick Start Guide

Features

- IP68 dust proof and waterproof (6.5 ft deep for up to 30 min), and MIL-STD-810H durability
- 48MP rear, 8MP front, and 16MP wide-angle 4K action cameras, all function underwater
- Single front-facing receiver/loudspeaker and dual microphone noise-cancellation to hear and be heard clearly
- Biometric authentication via facial recognition or fingerprint sensor for quick, secure access
- Large 4500mAh battery, Qi wireless charging, and USB Type-C with Quick Charge 4.0 compatibility
- User-programmable large side button to be used as a dedicated PTT key or for quick access to other functions
- Standard 2-Year Manufacturer's Warranty

NOTE: For User Guide and Safety & Warranty information about your phone, swipe up on the Home screen and tap **Settings** > **About phone** > **User guide** or **Safety & Warranty** on your phone or visit: [KyoceraMobile.com/Support/Phone](https://www.kyoceramobile.com/Support/Phone) and select your phone.


Setting up your phone

Your phone may already have a SIM card installed. To insert or replace the SIM card or to insert a microSD card, follow these steps:

Optional: Insert the microSD card

Step 1. Pull out the SIM/microSD card tray

With the phone facing up, insert your fingernail into the slit on the SIM/microSD card tray cover and pull out the tray.

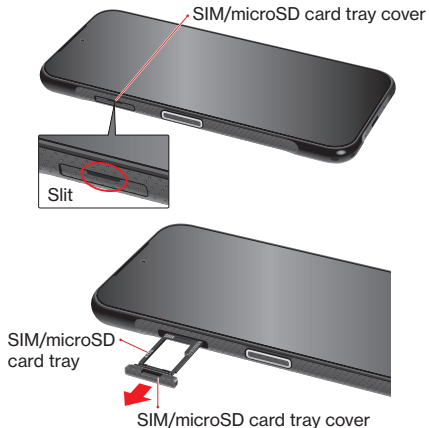

Step 2. Place a microSD card into the tray

 
Put the tray onto a flat surface and place a microSD card into the tray. Ensure the gold contacts are facing down as shown.

NOTE: microSD cards are sold separately.



Step 3. Insert the SIM/microSD card tray

Insert the tray into the phone, being careful not to let the cards slide out. Then gently push the tray back into the slot until it fits into place.

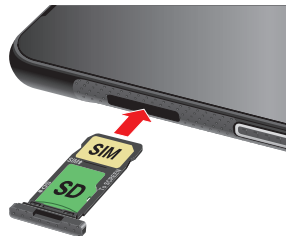

Step 4. Check the SIM/microSD card tray cover

In order to maintain your phone's waterproof seal, confirm that the card tray cover is securely closed.



WARNING: Do not use the phone under water if the SIM/microSD card tray cover is broken or open.


Step 5. Charge your phone

Before turning on your phone, charge it fully.

NOTE: Use only a USB Type-C charger/cable for this phone.

Insert one end of the USB cable into the Phone's USB/Charger port. Then, insert the other end into the adapter and plug it into an outlet.

When charging is complete, remove the cable from the port. Unplug the AC adapter from the power outlet to conserve energy.

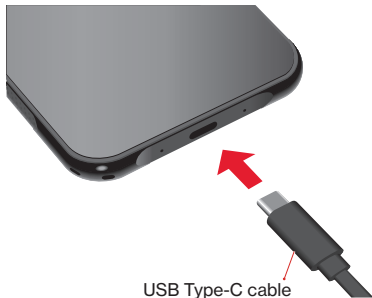

WARNING: Use only approved adapters and cables with your phone. Improper handling of the charging port, as well as the use of an incompatible charger or cable, may cause damage to your device and void the warranty.

NOTE: For the fastest charging times, use the optional Adaptive Fast Charging AC adapter SCP-53ADT (sold separately). For more information, visit solutions.kyoceramobile.com/shop.

Using your phone

Turning your phone on



To turn your phone on, press and hold the **Power key**.



Turning your phone off


1. Press and hold the **Power key** until the phone options are displayed.
2. Tap **Power off** to turn the phone off.

 
Locking/unlocking the screen

To turn on your screen, press the **Power key**, then:

 >  Swipe up to open the Home screen.

 >  Swipe left to open the Camera app.

 >  Swipe right to launch Google Assistant.

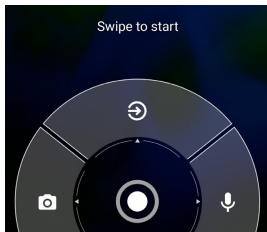

To turn off your screen and prevent accidental key presses, press the **Power key**.

Accessing apps




1. From the Home screen, tap an app icon that you want to open.

– or –



1. Swipe up from the bottom of the Home screen to open the Apps launcher screen.
2. Tap an app icon that you want to open.

Making a call

Using the dialpad:

1. From the Home screen, tap  to open the phone app.
2. Tap  on the bottom right of the screen.
3. Tap the number keys on the dialpad to enter the phone number.
4. Tap  to call the number.
5. For more information, please visit support.google.com/phoneapp.

From Contacts list:

1. From the Home screen, tap .
2. Tap **Contacts** to display your contacts list.
3. Tap the contact you want to call.
4. Tap  to call the number.
5. For more information, please visit support.google.com/contacts.

Contact information

- Find out more about Kyocera
[kyoceramobile.com/](https://www.kyoceramobile.com/)
- Phone support and Registration
[kyoceramobile.com/support/phone/](https://www.kyoceramobile.com/support/phone/)
- Learn about our white glove service for businesses
[kyoceramobile.com/business/business-select/](https://www.kyoceramobile.com/business/business-select/)
- Find accessories
[kyoceramobile.com/accessories/](https://www.kyoceramobile.com/accessories/)