

Fresno





QUICK START GUIDE

Hello

Thank you for purchasing your Fresno flip phone. Please follow these simple but important instructions for optimal use of your new phone.

1 Your Device

1.1 Overview

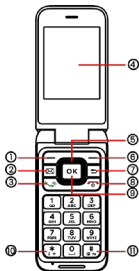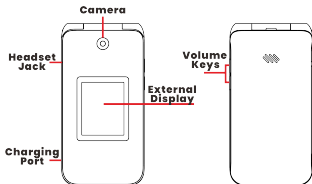

① **Left Soft Key**

- Press: to access Notifications
- Multi-functions in different scene

② **Messages**

- Press: access **Messages**

③ **Call key**

- Make a call
- Press: Enter call log (from Idle screen)

④ **Internal display**

⑤ **Navigation Key (up, down, left, right)**

- Menu selection moves up, down, left, and right
- Press Right: Access Camera / Video
- Press Left: Access Pictures
- Press Up: Access Website
- Press Down: Access Settings

⑥ **Right Soft Key**

- Press: Access Contacts
- Press: Access Options

⑦ **Back/Delete Key**

- Move backwards through Menus
- Delete input unnecessary



⑧ **End/Power Key**

- Press: End a call, return to the main screen
- Press and hold to Power on/off



⑨ **Center Soft Key**

- Confirm and select an option (press OK key)
- Press: Access app list (from home screen)

⑩ Key symbols

- Press  then choose a symbol. Press the Center Soft Key  to Lock the device.

⑪ Letters symbols


- In home screen, press  to switch vibrating mode
- In the input interface, press  to switch between with number, letter, capital, lowercase,

1.2 Setting up your phone

Your phone may not have any SIM card pre-installed. MicroSD cards excluded as well.

NOTE: Power off the device before opening the back cover to insert a microSD or replace the SIM card.

Step 1. With the device facing down, remove the back cover from the bottom left corner. Use your fingernail to carefully lift the cover away from the device body.

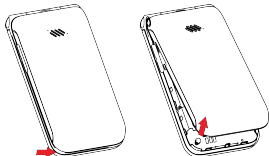

Step 2. Remove the battery using your fingernail to lift from the top.




Step 3. To insert SIM card or microSD card, push the SIM card or microSD card into the card slot with the gold-colored contacts facing down.




To remove the SIM card or microSD card, press down on the small plastic tab, then slide out the card. Do not use force or any sharp objects.

Step 4. Re-install the battery by aligning the gold contact points of the battery with the gold contact points of the cave. It only fits one way. Press down to snap in place.

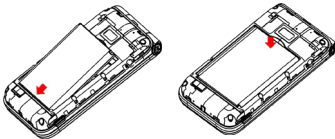

Step 5. Carefully align the back cover with tabs and press into place. It only fits one direction.

Step 6. Charge your phone fully before turning it on and starting the set-up process.

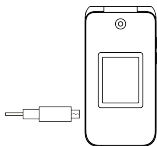


WARNING: Only use the charger and cable supplied with the phone. Using incompatible chargers or tampering with the charging port could damage your phone.

1.3 Power on your phone

Press and hold the **End/Power Key**  until the phone powers on.



Note: Even if no SIM card is installed, your phone will still power on and you will be able to connect to a Wi-Fi network and use some of the phone's features.

1.4 Power off your phone

Press and hold the **End/Power Key**  until the phone has a vibration and then device power off immediately.

2 Phone call

2.1 Making a Call


Dial the desired number then press the **Call key**  to make the call. If you make a mistake, you can delete the incorrect digits by pressing the **Back/ Delete Key** .

Press the **Left Soft Key**  to call

Press the **Right Soft Key**  to show more **Options**



Or making a call from:

-Make a call from your call log


From the Home screen, press the **Call key**  to access the call

log and choose the contact you want to dial, press the **Call key** .



• Make a call from Contacts

From the home screen, press the **Right Soft Key** , Choose the contact you want to dial, press the **Call key** .

• Making an emergency call

If your phone has network coverage, dial emergency number and press the **Call key**  to make an emergency call. This works even without a SIM card and without typing the PIN code.

• Make an international call

To dial an international call, press and hold  to enter "+" in dial screen, enter the international country prefix followed by the full phone number, then press the **Call key** .

 




• Calling your voicemail

Press and hold  key to call and listen to your voicemail.

2.2 Answering or rejecting a call

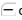
During an incoming call:

Open the flip to answer, Flip open to answer is On. Otherwise:

- Press the **Left Soft Key**  or **Call key**  to answer.
- Press the **Right Soft Key**  or the **End/Power Key**  to Hang up.
- Press the **Center Soft Key**  to reject the call by sending a preset message.
- To mute the ringtone volume of an incoming call, press the Volume Up/Down Key.

2.3 Hang up a call


During a call:

- Open the flip and press the **End/Power Key**  to end the call.
- Open the flip and close the flip to end the call.

3 Contacts

Contacts enables quick and easy access to the contact you want to reach.

 
From the Home screen, press **Right Soft Key**  or press the


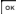 

Center Soft Key  and select Contacts to enter Contact list.

3.1 Add a Contact




On the contacts list screen, press the **New** to create a new contact and input the contact information. When finished, press the **Left Soft Key** to save.

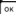3.2 View a Contact


On the contacts list screen, use the **Navigation Key** to select a Contact, then press the **Center Soft Key**  to access the detail screen.

- Press the **Left Soft Key**  or **Center Soft Key**  to make a call.
- Press the **Right Soft Key**  to access **Options**: Send a message, Add to favorites, Edit, Delete, Share.


3.3 Edit a Contact

On the contacts list screen, using the **Navigation Key** to select a Contact, then press the **Right Soft Key**  to access **Options**, select **Edit** and press the **Center Soft Key**  to edit. When finished, press the **Left Soft Key**  to save.

3.4 Delete Contacts




On the contacts list screen, press the **Right Soft Key**  to access **Options**, select **Delete**.

3.5 Import/Export Contacts



On the contacts list screen, press the **Right Soft Key**  to access **Options**.

- Select **Import contacts** to import contacts from USIM, Internal shared storage (vCard) or SD card (vCard) to phone.
- Select **Settings > Export contacts** to export contacts from phone to internal storage or SD card.

4 Messages

Press the **Messages**  Key, or from the home screen, press the **Center Soft Key**  and select **Messaging**  to enter Messages.

4.1 Sending a New Text Message




Press **Left Soft Key**  New to create a new message, input desired phone number and message. Press **Left Soft Key**  to send out.

4.2 Sending a Multimedia Message


Press the **Right Soft Key**  to access **Options**.

MMS enables you to add contact, and subject status, send videos, pictures, photos, contacts and sounds to other compatible phones, insert contact, quick test, and setting

5 Camera


- To access this function, press the **Center Soft Key**  from the home screen and select Camera.
- Position the object or landscape in the screen and press the **Center Soft Key**  to take the photo. Photos will be automatically saved to the Multimedia-Picture.
- Press Left and Right of the **Navigation Key** to switch between Photo and Video mode.
- When switch to Video, Press the **Center Soft Key**  to record a video, press again to stop recording, videos will be automatically saved to Multimedia- Video app.

6 Browser

To access this function, press the **Center Soft Key**  from the home screen and select browser.

7 Multimedia

The Multimedia Group provides you with Picture, Music, Video, FM Radio, Sound recorder.

To access this Group, press the **Center Soft Key**  from the home screen and select Multimedia.

Press the **Navigation Key** to switch each apps you want.

7.1 Picture


The Picture app provides you with one location to view and organize all your saved photos.

To access this function, press the **Center Soft Key**  from the home screen and select **Multimedia >Picture**.

Press the **Navigation Key** to select picture list.


Use the **Navigation Key** to select an image and press the **Center Soft Key** to confirm, then press the **Right Soft Key** to access **Options**.



7.2 Music

To access this function, press the **Center Soft Key**  from the home screen and select **Multimedia >Music**. Using this menu, you can play music files stored on phone storage in your phone. Music files can be downloaded from your computer to phone using a USB cable.

7.3 Video


Video acts as a media player for you to view videos.

To access this function, press the **Center Soft Key**  from the home screen and select **Multimedia >Video**

- Use the **Navigation Key** to select a video, press the **Center Soft Key**  to play the video.
- Press the **Right Soft Key**  to access **Options**.

 
7.4 FM Radio

 

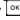 

Your phone is equipped with a radio. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you tune to stations that offer Visual Radio service.

To access this function, press the **Center Soft Key**  from the home screen and select **Multimedia > FM Radio**.

To use it, you must plug in your headset, which works as an antenna connected with your phone.

7.5 Sound Recorder.

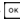To access this function, press the **Center Soft Key**  from the home screen and select **Multimedia > Sound Recorder**.

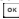
- Press the **Center Soft Key**  to start recording, press the **Center Soft Key**  to End.
- Press the **Right Soft Key** and use the **Navigation Key** to select the recorder, press the **Center Soft Key**  to play.
- Press the **Right Soft Key**  to access **Options**, such as

delete, share, rename, details.

8 Tools


8.1 Calendar





Use the Calendar to keep track of important meetings, appointments, etc.

To access this function, press the **Center Soft Key**  from the home screen and select **Tools > Calendar**


- Create New Event
- Event reminder

8.2 Calculator

To access this function, press the **Center Soft Key**  from the home screen and select **Tools > Calculator**



- 0-9 key: Input numbers
-  key: "."
- Navi key: +, -, x, ÷
-  =
-  : Clear
-  : Options

8.3 Clock


To access this function, press the **Center Soft Key**  from the home screen and select **Tools > Clock**

Press **Navigation Key** (Left, Right) to switch between Alarm, Timer, Stopwatch, Clock.






a) Set Alarm

Press the **Right Soft Key**  to add a new alarm. Select Hour, Minutes, AM/PM, then Press OK. Press the Back Key  to **Save**.

 
 
b) Set Timer

Press the **Navigation Key** (up, down) to select and edit hour, minute and second, when finished, press the **Center Soft Key**  to start the Timer.

c) To Set the Stopwatch

- Press the **Center Soft Key**  to start Stopwatch.
- When the Stopwatch is ongoing, press the **Right Soft Key**  to record the lap, press the **Center Soft Key**  to pause the time.
- When the Stopwatch is paused, press the **Center Soft Key**  to continue the total time, press the **Left Soft Key**  to reset the stopwatch and clear lap times.

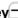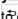

d) Clock

- press the **Left Soft Key**  to ALL to select world time of each time zone. Press Back Key  to check all selected times.

9 Applications





9.1 E-Mail

a) Setup E-Mail

 
You can access this function by pressing the **Center Soft Key**  from the home screen, select Applications and select **E-Mail**. 

An email Account setup will guide you through the steps to set up an email account, select next to continue.

b) Send E-Mail

- Press the **Left Soft Key**  to compose a new email from the Inbox screen.
- Enter recipient(s) email address(es) in the To field, press the **Center Soft Key**  to confirm and add new recipient(s).
- Type the subject and the content of the message. You may use your voice to enter the subject and content of your emails by pressing and holding the **Center Soft Key**  button.
- Finally, press the **Left Soft Key**  to send.



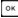


9.2 File Manager

From the Home screen, pressing the **Center Soft Key** , select **Applications** and select **File Manager**.



File Manager displays all data stored on the phone and the microSD card, including applications, media files downloaded from Store, YouTube, or other locations; videos, pictures, or audios you have captured; other data transferred via Bluetooth, USB cable, etc.

9.3 Note

Press the **Center Soft Key**  from the home screen, select Applications and select **Note**

- Press the **Left Soft Key**  to add new note, enter contents then press the **Left Soft Key**  to **Save**.
- On the notes list, press the **Right Soft Key**  to access **Options**, such as delete, share, select Notes.
- Use the **Navigation Key** to select the note, press the **Center Soft Key**  to view detail, edit. Press the **Right Soft Key**  to delete or share the note via Email, **Messages**, or Bluetooth.

10 Setting

From the Home screen, press the **Center Soft Key**  and select Settings . Then you will see below all Options.


10.1 Wireless & Network

Select wireless & Network and press **Center Soft Key**  to access.

- Wi-Fi
- Bluetooth
- Mobile Network
- Airplane Mode
- USB Function

10.2 APPs

Including all apps here from system and personal download.

Press **Navigation Key** to select and **Center Soft Key**  to access. Open & Disable & Force stop will be **Options** to select.

Notifications: Turn on/off to show this on home screen or not.

10.3 Sounds

Press the **Center Soft Key** , select **Settings**  > **Sounds**



- To adjust Volume
- To adjust ringtones

10.4 Display

Press the **Center Soft Key** , select **Settings**  > **Display**

- To adjust Brightness
- To adjust Wallpaper
- To adjust Screen timeout
- To adjust Key backlight timeout
- Change font size
- Change Display size

10.5 Battery

From the Home screen, press the **Center Soft Key** , select **Settings**  > **Battery**

At the top of page, Showing battery currently status. Battery percentage can be selected to show on status bar

10.6 Software Updates



To access Software Updates, follow the steps below:

- Connect your device to a Wi-Fi network and make sure it has a strong data connection.
- Ensure your battery is fully charged before starting the software update. Your device's current battery level can be found on your device under **Settings > Software Update > Check for updates**
- When there is a new mandatory software update version available, the phone will start downloading automatically, then select Continue to update your system.

 

10.7 System

a) Language & input

Your device can be operated using English, Spanish, etc. language.

- From the Home screen, press the **Center Soft Key** , select **Settings**  > **System>language**

b) Date & Time

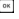- From the Home screen, press the **Center Soft Key** , select **Settings**  > **System>Date & Time**

c) Reset Phone

This will erase all data from your phone's internal storage, including app data, music, photos, other user data etc.

d) About Phone

To access this to see the device name, mode, phone number, software version etc.

11 Approved Firmware Versions

This device will only operate with firmware versions that have been approved for use by your wireless carrier and the device manufacturer. If unauthorized firmware is placed on the device it will not function.

12 Information About Safeguarding Devices

We encourage customers to take appropriate measures to secure their devices and invite them to take advantage of the features available on this device to help secure it from theft and/or other unauthorized access and use. This device has a locking function (e.g., user-defined codes or patterns) that can serve as a first line of defense against unauthorized use or access to stored information. Preloaded security applications that allow customers to track or locate misplaced devices can be found on several devices. Lost or stolen devices should be immediately reported to your wireless carrier so that proper measures can be taken to protect accounts.

For additional information, visit your wireless carrier's Privacy Policy.

13 Trademarks and Copyrights

Hot Pepper Mobile, Inc. is the owner of "Fresno", and has the right to use "Hot Pepper" and other hotpepper trademarks. All other trademarks are property of their respective owners. Visuals for information purpose only. Specifications are subject to change without prior notice. Google and Android are trademarks of Google Inc.