



hotpepper

Hot Pepper Chilaca Plus




Quick Start Guide

Hello from Hot Pepper

Thank you for purchasing your Chilaca Plus mobile phone. Please follow these simple but important instructions for optimal use of your new phone.

Device Layout

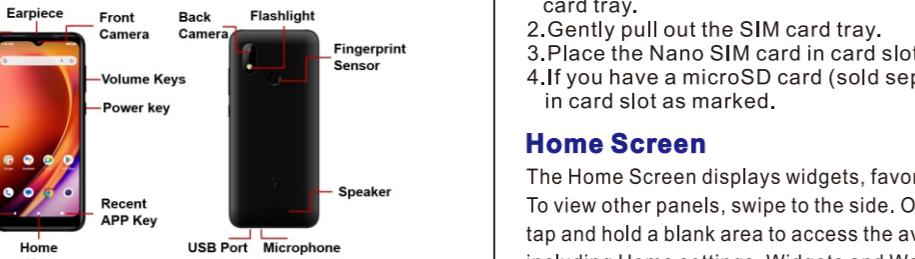

Charging the Battery


Connect the Type-C USB end of the data cable to the charging port on your device.

1. The charging port is located on the bottom of your phone.
2. Connect the USB end of the cable to the charger.
3. Connect the charger to an electrical outlet to fully charge your phone.

Power Your Phone On & Off

1. The Power key is located below the volume keys on the right side of the phone.
2. Press and hold the Power key for a few seconds to turn on your phone.
3. To turn off your phone, press and hold the Power key until the menu appears and then select Power Off. (other options also include Restart, Screenshot and Making an Emergency Call)

SIM Card & MicroSD Card

 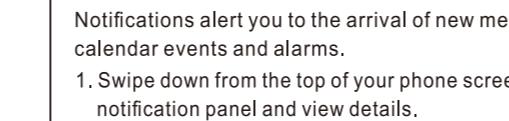


 
1. Insert the SIM ejection pin into the hole to open the SIM card tray.
2. Gently pull out the SIM card tray.
3. Place the Nano SIM card in card slot as marked.
4. If you have a microSD card (sold separately), place it in card slot as marked.

Home Screen

The Home Screen displays widgets, favorite apps and more. To view other panels, swipe to the side. On the home screen, tap and hold a blank area to access the available options, including Home settings, Widgets and Wallpapers.

1. To move an app, tap and hold an item on the home screen and then drag it to a new location and release.
2. To create a folder, tap and hold an app, then drag it over another app. Drop the app when a folder frame appears around the apps - a new folder containing the selected apps will be created.
3. To remove an item, tap and hold the item. Then drag it to Remove at the top of the screen and release.
4. To add more apps to a folder, tap and hold another app and then drag it to the folder and release.

A Widget  **Status Bar** 

App folder 

Notifications and Quick Settings Panel

Notifications alert you to the arrival of new messages, emails, calendar events and alarms.

1. Swipe down from the top of your phone screen to open the notification panel and view details.
2. When you're finished with a notification, swipe left or right to swipe it away. To dismiss all notifications, touch **CLEAR ALL**.
3. Use Quick Settings to easily get to frequently used settings, like turning on airplane mode and more.
4. To change a setting, just touch the icon. Main settings are showing as below:

- Wi-Fi: Turn Wi-Fi on or off. To open Wi-Fi settings, tap and hold the Wi-Fi icon
- Bluetooth: Turn Bluetooth on or off. To open Bluetooth settings, tap and hold the Bluetooth icon.
- Do Not Disturb: Turn Do Not Disturb mode on or off. Tap and hold the Do Not Disturb icon to access feature settings.
- Flashlight: Turn the flashlight on or off.
- Auto-rotate: Lock your device's orientation in portrait or landscape mode.
- Location: Turn location service on or off.
- Mobile Data: See mobile data usage and turn it on or off.
- Airplane Mode: Turn airplane mode on or off.
- Display Brightness: Slide left or right to lower or increase the brightness of your screen.

On the Home Screen, tap  at the bottom or swipe up and then tap  to enter the Photos screen.

1. To delete an image or video, select an image or video, tap  to move to trash and it will be deleted.
2. To delete multiple images and videos, tap and hold any image or video to delete, then tap the images or videos you would like to remove. A checkmark icon will appear, then tap  to move them to the trash or tap on the top right of the Photos screen and tap Delete.

3. To edit an image, select an image, tap  , select the options and tap Save copy.

On the Home Screen, tap  at the bottom or swipe up and then tap  to enter the Phone screen.

1. Enter a phone number on the keypad to make a call. If the keypad does not appear on the screen, tap  to open it.
2. Tap  and then choose someone to call from your contacts.

3. To view recent calls, tap  Call History.

4. During a call, you can tap  at the bottom of the screen to hang up.

Receiving a call

The Incoming Call screen pops up when a call comes in, along with the caller ID and other information you've entered in the Contacts.

There are various options available when a call comes in:

1. To answer a call, slide  up.
2. To reject a call, slide  down.
3. To reject the call and send an SMS message to the caller, slide  up from the bottom left of the screen and tap one of the preset text messages to send it to the caller.

Contacts

On the Home screen, swipe up and then tap  to enter the Contacts screen. This app easily saves all of your important contact information.

Take a Photo

1. On the Home screen, tap  or swipe up and then tap  to enter the Camera screen.

2. Focus on your subject by looking through your phone screen.

3. Tap  to take a photo.

Creating a Video

1. On the Home screen, tap  or swipe up and then tap  to enter the Camera screen.

2. Swipe to the right to activate the Video mode.

3. Tap  to start recording a video.

4. Tap  to stop when you finish recording.

Messaging

On the Home Screen, tap  at the bottom or swipe up and then tap  to enter the Messaging screen.

Creating a Message

1. On the Messaging screen, tap  . Enter the recipient's number or select a contact in the contacts list.

2. Add your message. Tap  then  to attach media files, such as an image, a contact or a file.

3. Tap to send the message.

Note: A message will be sent as a media message, or MMS, when media files are included

Photos

On the Home screen, swipe up and then tap  to enter the Photos screen.

1. To delete an image or video, select an image or video, tap  to move to trash and it will be deleted.

2. To delete multiple images and videos, tap and hold any image or video to delete, then tap the images or videos you would like to remove. A checkmark icon will appear, then tap  to move them to the trash or tap on the top right of the Photos screen and tap Delete.

3. Tap to send the message.

APPROVED FIRMWARE VERSIONS

This device will only operate with firmware revisions that have been approved for use by your wireless carrier and the device manufacturer. If unauthorized firmware is placed on the device it will not function.

Phone

Making a call

On the Home Screen, tap  at the bottom or swipe up and then tap  to enter the Phone screen.

1. Enter a phone number on the keypad to make a call. If the keypad does not appear on the screen, tap  to open it.

2. Tap  and then choose someone to call from your contacts.

3. To view recent calls, tap  Call History.

4. During a call, you can tap  at the bottom of the screen to hang up.

Wireless Setting

1. On the Home screen, swipe up and then tap  to enter the Settings screen. Then, choose Network & Internet > Wi-Fi to turn Wi-Fi on/off.

2. Drag the slider to On, enabling your phone to scan for available Wi-Fi networks.

3. Tap the name of a desired network to connect, entering the password if necessary.

There are various options available when a call comes in:

1. To answer a call, slide  up.

2. To reject a call, slide  down.

3. To reject the call and send an SMS message to the caller, slide  up from the bottom left of the screen and tap one of the preset text messages to send it to the caller.

Information about safeguarding devices

We encourage customers to take appropriate measures to secure their devices and in the event to take advantage of the features available on this device to help secure it from theft and/or unauthorized access and use. This device

has a locking function (e.g., user-defined codes or patterns) that can serve as a first line of defense against unauthorized use or access to stored information. Preloaded security applications that allow customers to track or locate misplaced devices can be found on several devices. Lost or stolen devices should be immediately reported to your wireless carrier so that proper measures can be taken to protect accounts.

For additional information, visit our wireless carrier's Privacy Policy.

Camera

You can use the Camera app to take pictures and record videos. In addition to unlocking your phone, you can also use your fingerprint.

Take a Photo

1. On the Home screen, tap  or swipe up and then tap  to enter the Camera screen.

2. Focus on your subject by looking through your phone screen.

3. Enter keywords in the search box. The phone will automatically display the matches.

4. Tap  to take a photo.

Creating a Video

1. On the Home screen, tap  or swipe up and then tap  to enter the Camera screen.

2. Focus on your subject by looking through your phone screen.

3. Tap  to start recording a video.

4. Tap  to stop recording a video.

Contacts

In addition to unlocking your phone, you can also use your fingerprint.

Adding a contact

1. On the Home screen, tap  or swipe up and then tap  to enter the Contacts screen.

2. Tap  to add a new contact.

3. Enter the contact information and tap  to save the contact.

Photos

On the Home screen, tap  or swipe up and then tap  to enter the Photos screen.

1. To delete an image or video, select an image or video, tap  to move to trash and it will be deleted.

2. To delete multiple images and videos, tap and hold any image or video to delete, then tap the images or videos you would like to remove. A checkmark icon will appear, then tap  to move them to the trash or tap on the top right of the Photos screen and tap Delete.

3. Tap  to edit an image, then tap  to select the options and tap  to save the copy.

Information about safeguarding devices

We encourage customers to take appropriate measures to secure their devices and in the event to take advantage of the features available on this device to help secure it from theft and/or unauthorized access and use. This device

has a locking function (e.g., user-defined codes or patterns) that can serve as a first line of defense against unauthorized use or access to stored information. Preloaded security applications that allow customers to track or locate misplaced devices can be found on several devices. Lost or stolen devices should be immediately reported to your wireless carrier so that proper measures can be taken to protect accounts.

For additional information, visit our wireless carrier's Privacy Policy.

Trademarks and Copyrights