
U.S. Cellular® Home Phone Setting TTY mode

TTY Support

TTY (Text Telephony) and TDD (Telecommunications Device for the Deaf) are supported by the U.S. Cellular® Home Phone. In order to use the TTY network, you must have a TTY-compatible phone and be in TTY mode. Please note that most digital wireless devices are TTY-compatible.

Dial ***983*889*n#** to set the TTY mode.

- **n = 0: TTY off mode.** The standard voice speaking mode and listening mode. This is the default setting.
- **n = 1: TTY full mode.** Transmit and receive the TTY characters.
- **n = 2: VCO mode.** Receive TTY characters but transmit them by speaking into the speaker.
- **n = 3: HCO mode.** Transmit TTY characters but receive them by listening to the receiver.